



## SUPERBA C5 & COMELUX C5 OPERATING INSTRUCTIONS

1. Unfold table by pulling knob (1) on left front leg and secure with lever (2).
2. Lower cloth tray (3) and fit hose flex rod in socket provided (4 - top left of boiler). Plug iron lead into socket at rear of boiler and connect hose to solenoid (5). Tighten with clip provided. Loop hose through top of flex rod.
3. Remove safety filler-cap (6) by pushing down and turning anticlockwise.
4. Fill boiler with clean water (to max line on sight glass - 7) and replace cap. Do not over tighten.
5. Plug unit into suitable 13amp socket outlet and switch on.
6. Switch on boiler switch (8) and iron switch (9). Both will light up.
7. After approximately 10 minutes, boiler indicator (10) will light up and the pressure gauge will show 3 BAR. The unit is now ready for use. The indicator (10) will go on and off during normal operation to indicate whether the heating element is on or off.
8. Adjust table thermostat (11) to desired temperature. (Average 75°C).
9. Adjust iron thermostat (12) to desired temperature.
10. Adjust steam volume with volume control knob (13).
11. Press foot switch (14) for table suction when required.

Should the RED indicator (15) light up, there is no water left in the boiler. Switch off and leave to cool down before refilling with fresh water.

It is recommended to drain the unit at regular intervals. To do so, please follow these steps:

- A. Switch off boiler switch.
- B. Press microswitch (16) on iron until no steam is left in boiler.
- C. Unscrew and remove protective cover from drain valve.
- D. Place bucket directly under drain valve and gently open fully. To increase the drain flow, also remove the safety filler-cap.
- E. When empty, close drain fully and replace protective cover.

Please see [www.danor-engineering.co.uk](http://www.danor-engineering.co.uk) for video instructions.

MODELLO  
**SUPERBAC5**

