



OPERATING INSTRUCTIONS

Table Top Pratika

1. Remove fill-cap by pressing down and turning anti clockwise.
2. Fill boiler with clean water. The water level should be between minimum and maximum on the gauge glass level (6). Replace fill-cap. Do not over tighten.
3. Check that the drain valve is closed (lever across the valve).
4. Plug electric lead into wall socket and switch on socket outlet.
5. Switch on boiler switch (9) and iron switch (11).
6. Check the iron thermostat (4). Turn clockwise to increase heat, anti-clockwise to decrease. Normal setting is about midway between minimum and maximum.
7. When indicator (8) lights up, the boiler will have reached full pressure. It is normal for this light to go on and off when the boiler is in use.
8. When using the boiler, check the water level regularly. When level is down to minimum, switch off the boiler switch (9) and use up any remaining steam. Allow the boiler to cool down and ensure the pressure gauge is down to zero before removing the fill cap and adding more water.
9. Steam flow can be regulated with the black knob (1). Clockwise for less steam, anti-clockwise for more steam.
10. It is advisable to drain the boiler regularly. Before draining, ensure the boiler is switched off, that there is little or no pressure left in the boiler and always open the drain valve with caution.

